 


K L A S S E 14

User Manual

Two Hands / Three Hands

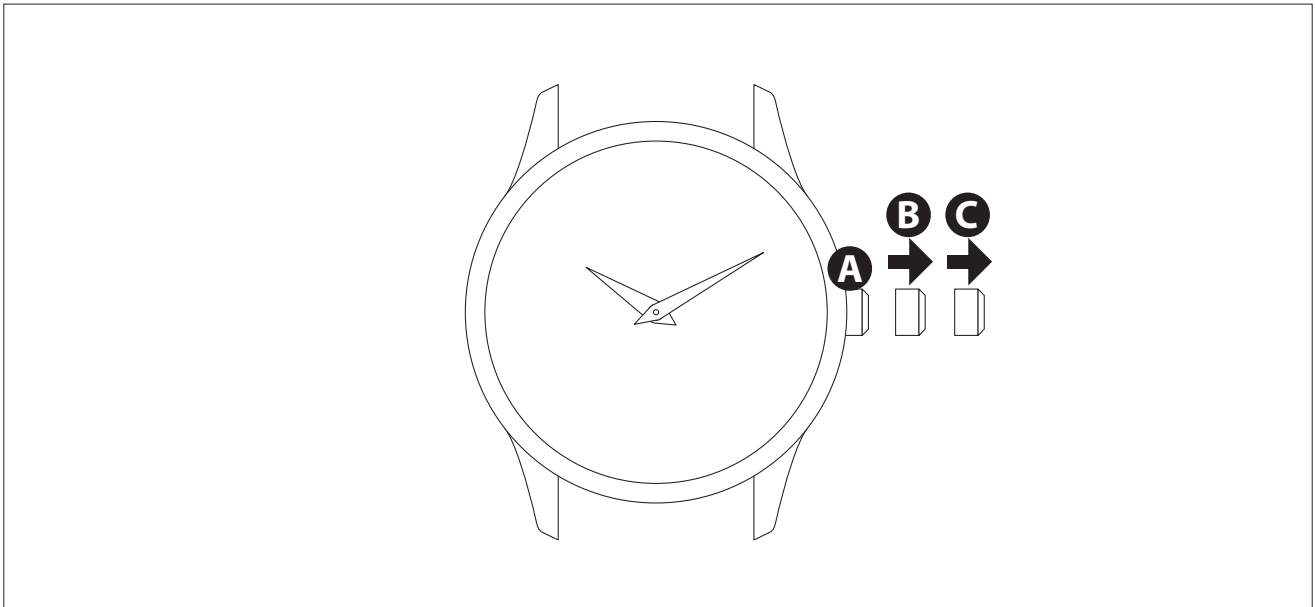

Getting started:

Remove the plastic stopper then press the winder.

Instructions to keep your watch in good condition:

Avoid temperatures below 0oC (30oF) or above 35oC (100oF).

Avoid exposure to sun, steam, contact with alcohol, detergents, perfume or cosmetic products to prevent distortion, discoloration or any damaging reaction.

Do not use any watch button under water to prevent water from entering the mechanism.

Use within specific water resistant standard.

Setting the date:


Pull the winder out to position B, then turn the winder anticlockwise to set the Date. If the date is set between 9pm and 1am, it is possible that the day will not change for the next day.

After date adjustment, push the winder back to its original position.

Setting the time:

Pull the winder out to position C, then turn the winder clockwise to set the time. After time adjustment, push the winder back to its original position.

Chronograph

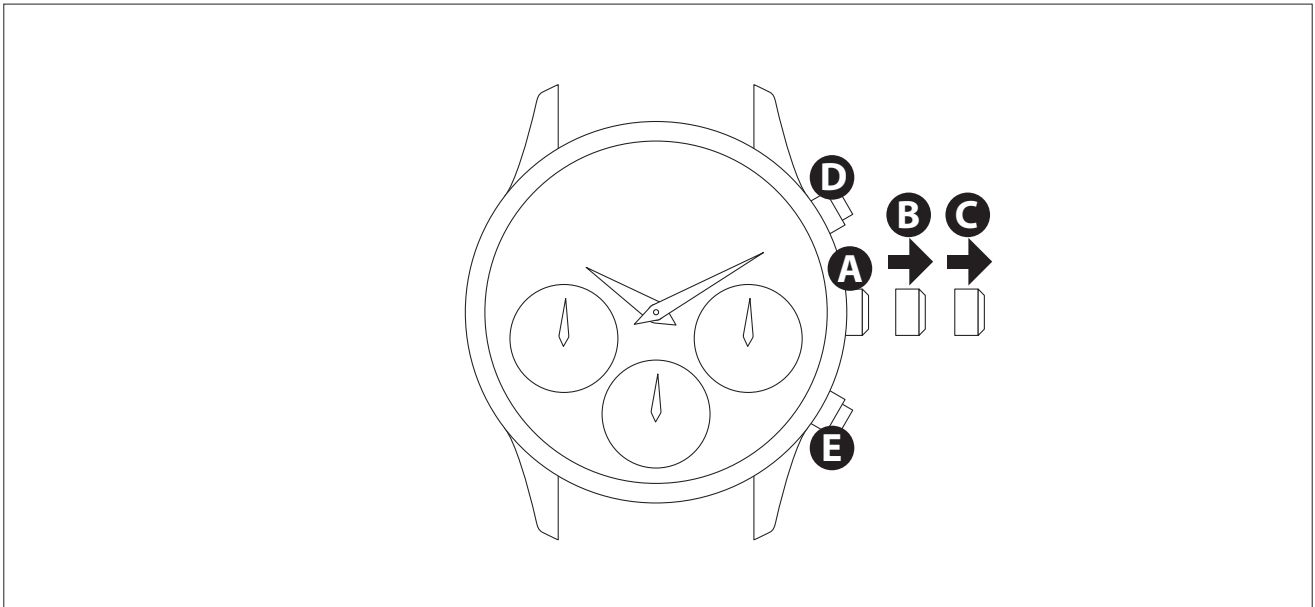

Getting started:

Remove the plastic stopper then press the winder.

Instructions to keep your watch in good condition:

Avoid temperatures below 0°C (32°F) or above 35°C (100°F).

Avoid exposure to sun, steam, contact with alcohol, detergents, perfume or cosmetic products to prevent distortion, discoloration or any damaging reaction.

Do not use any watch button under water to prevent water from entering the mechanism.

Use within specific water resistant standard.

Setting the date:

Pull the winder out to position B, then turn the winder anticlockwise to set the Date. If the date is set between 9pm and 1am, it is possible that the day will not change for the next day.

After date adjustment, push the winder back to its original position.

Setting the time:

Pull the winder out to position C, then turn the winder clockwise to set the time.

After time adjustment, push the winder back to its original position.

Function of chronograph:

Press the D button to start and stop the chronograph.

Press the E button to re-set the chronograph.


Choosing the chronograph's start position:

Pull the winder out to position B, then press the first button to set the chronograph second hand to the

starting position that you desire.

If you want to move the chronograph hand faster hold the first button down. Once the setting is done, return the winder to its original position.

Automatic

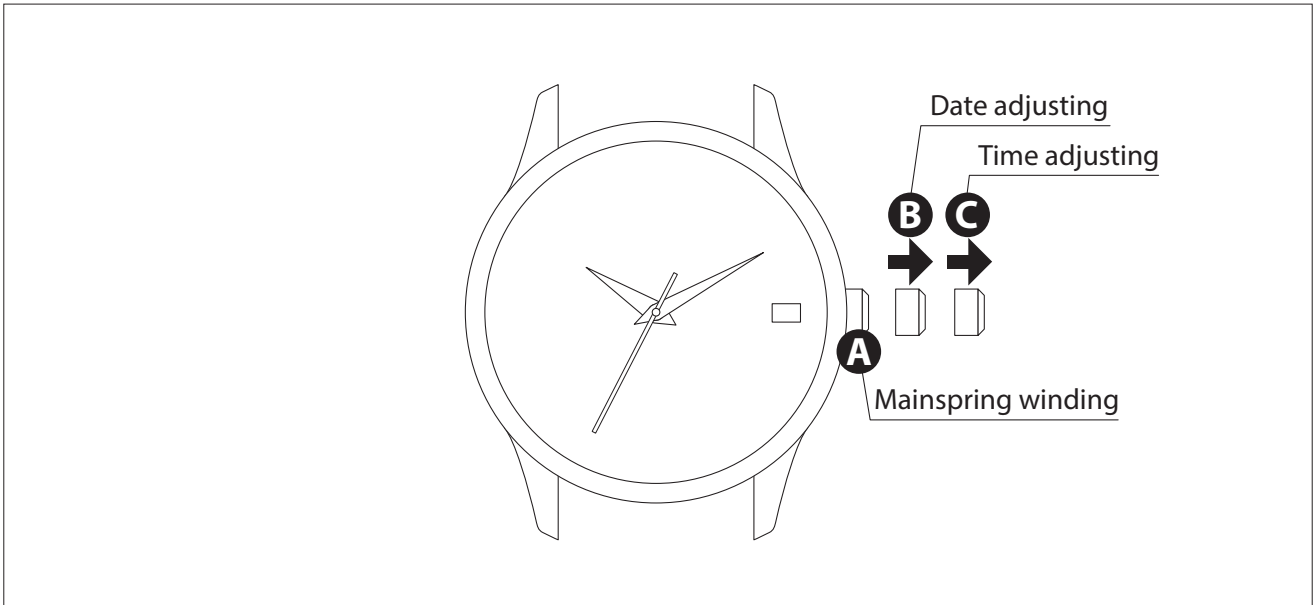

Getting started:

Remove the plastic stopper then press the winder.

Instructions to keep your watch in good condition:

Avoid temperatures below 0°C (32°F) or above 35°C (100°F).

Avoid exposure to sun, steam, contact with alcohol, detergents, perfume or cosmetic products to prevent distortion, discoloration or any damaging reaction.

Do not use any watch button under water to prevent water from entering the mechanism.

Use within specific water resistant standard.

Winding direction: Clockwise.

Operating method

Winding the mainspring, adjusting the hand, date is done by the below procedure.

(1) Winding the mainspring

Automatic winding watch can be also manual-winded by turning the crown in "A" position. Wind 15-20 times clockwise until second hand starts to move naturally.

(2) Adjusting date

Adjust the date by rotating the crown in "B" position.

*If the date is adjusted between the hours of around 8:30 PM and 2:00 AM the date may not change on the following day. After date adjustment, push the winder back to its original position.

(3) Adjusting time

Rotate the crown in "C" position and adjust the standard time. Then check if it is morning or afternoon and adjust correctly. After time adjustment, push the winder back to its original position.

KLASSE14

We are a brand that design and create timepieces in collaboration with designers, artists, famous personalities or just interesting characters. The idea is to create a limited collection of unique and exquisite watches that represent all categories; from contemporary to classic, from concept to sport. Klasse14 promotes modern lifestyle and the latest trends with the introduction of these fantastic watches, instantly becoming one of the new fashion statements.

